


### WOVEN POLYPROPYLENE SACK

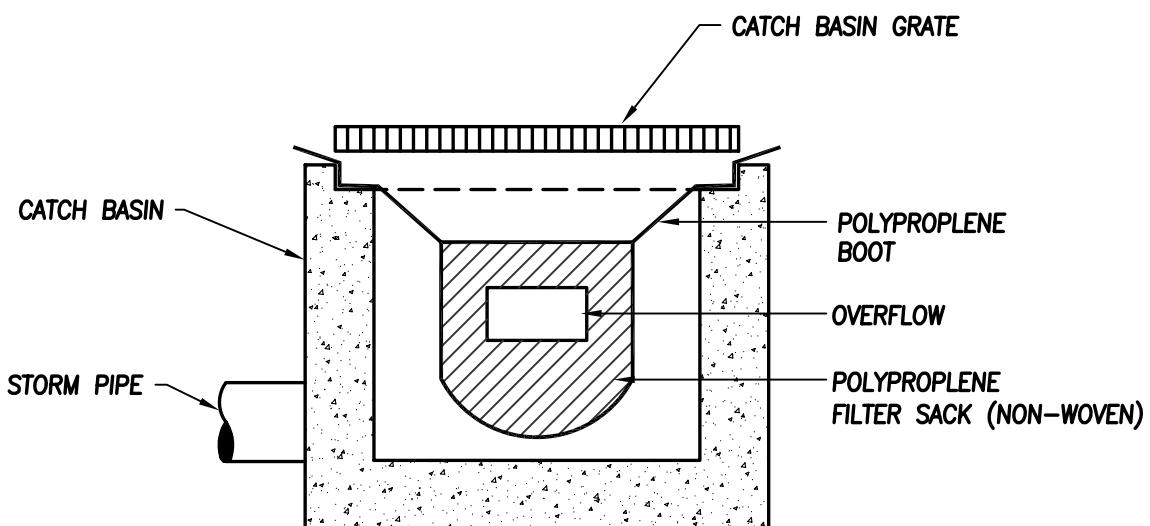

### NON-WOVEN POLYPROPYLENE SACK

#### NOTES:

1. RECESSED CURB INLET CATCH BASINS MUST BE BLOCKED WHEN USING FILTER FABRIC INLET SACKS, SIZE OF FILTER INLET SACK TO BE DETERMINED BY MANUFACTURER.
2. THE CONTRACTOR SHALL INSPECT THE FILTER WEEKLY AND DAILY DURING PERIODS OF FREQUENT RAIN.
3. FILTER SHALL BE CLEANED IN A MANNER WHICH ENSURES THAT ALL SEDIMENT REMAINS ON SITE.
4. THE FILTER SHALL BE REPLACED OR CLEANED WHEN THE BAG BECOMES HALF FULL.
5. FILTER SHALL BE FOSS ENVIRONMENTAL SERVICES "STREAMGUARD TYPE II-S CBF" OR EQUIVALENT.

INLET PROTECTION CATCH BASIN INSERT  
NTS